

DOOR HANDING REFERENCE SHEET

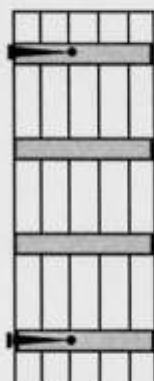


FIG 1A
ledged only



FIG 2A
ledged and
braced

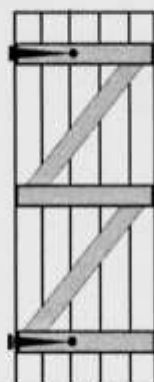


FIG 3A
ledged and
braced

- * The above diagrams show a typical room installation.
- * Hinges fitted to ledges, door swings into room
- * Ledges run almost to edge of door to allow hinge to be fixed.
- * Suffolk latches need a latch block or to be fixed through a ledge.



FIG 1B
ledged only



FIG 2B
ledged and
braced



FIG 3B
ledged and
braced

- * typical cupboard installation.
- * Hinges fitted to fair face., door swings outwards
- * Ledges stopped short of edge to avoid door stop.
- * *Ledges/braces not visible in this view- shown for information only.*
- * Latch block not usually required.